

ROCKER SWITCH WITH PILOT LIGHT & TWO-FUNCTION CONTROL

WARNING

1. All electrical work must be done in accordance with local codes, ordinances, or National Electrical Code as applicable. **FOR SAFETY, THIS PRODUCT MUST BE GROUNDED.** If you are unfamiliar with methods of installing electrical wiring, secure the services of a qualified electrician.
2. Turn off power and lock out service panel before installing, wiring, or servicing this product.
3. To prevent serious injury from electrical shock or damage to electrical components - **DO NOT WIRE HOT!**
4. A neutral wire is required for proper operation. (Rocker switch w/ pilot light only.)
5. Warranty void if miswired.

NOTE


**FOR "PUSH-IN" WIRE:
USE #14-GAUGE ONLY.**

**FOR SCREW TERMINALS:
USE #12-GAUGE OR #14-GAUGE SOLID
COPPER WIRE ONLY.**

INSTALLATION

1. Turn off power and lock out service panel before wiring the controls.
2. Install at least a 2¼" deep switch box for 14 AWG wire or at least a 3½" deep switch box for 12 AWG wire.
3. Connect cables to switch box and appliance (load) using appropriate connectors. Provide 6" leads inside box and appliance and strip ends 5/8". (Use strip gauge on back of switch.)
4. Make electrical connections following diagram on back. Make sure both the controls and the appliance are properly grounded. For side-wiring of rocker switch: Loop wires clockwise, ¾ turn around terminal screws. For back-wiring of rocker switch: Insert wires into holes and tighten side screws securely. Wiring clamps must tighten on stripped ends of wire - not on insulation.
5. Tuck wires into switch box and fasten the controls to box using attached screws.
6. Fasten the switch plate to the controls using the short screws from the parts bag.

WIRING DIAGRAM

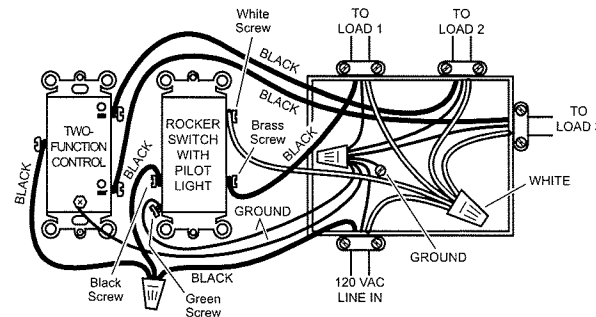

WARRANTY

BROAN ONE YEAR LIMITED WARRANTY

Broan warrants to the original consumer purchaser of its products that such products will be free from defects in materials or workmanship for a period of one year from the date of original purchase. THERE ARE NO OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.

During this one-year period, Broan will, at its option, repair or replace, without charge, any product or part which is found to be defective under normal use and service.

THIS WARRANTY DOES NOT EXTEND TO FLUORESCENT LAMP STARTERS AND TUBES. This warranty

does not cover (a) normal maintenance and service or (b) any products or parts which have been subject to misuse, negligence, accident, improper maintenance or repair (other than by Broan), faulty installation or installation contrary to recommended installation instructions.

The duration of any implied warranty is limited to the one-year period as specified for the express warranty. Some states do not allow limitation on how long an implied warranty lasts, so the above limitation may not apply to you.

BROAN'S OBLIGATION TO REPAIR OR REPLACE, AT BROAN'S OPTION, SHALL BE THE PURCHASER'S SOLE AND EXCLUSIVE REMEDY UNDER THIS WARRANTY. BROAN SHALL NOT BE LIABLE FOR INCIDENTAL, CONSEQUENTIAL OR SPECIAL DAMAGES ARISING OUT OF OR IN CONNECTION WITH PRODUCT USE OR PERFORMANCE. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state. This warranty supersedes all prior warranties.

To qualify for warranty service, you must (a) notify Broan at the address stated below or telephone: 1-800-637-1453, (b) give the model number and part identification and (c) describe the nature of any defect in the product or part. At the time of requesting warranty service, you must present evidence of the original purchase date.

Broan-NuTone LLC, 926 West State Street, Hartford, WI 53027 (1-800-637-1453)

99043743A