


HADTBN24, HADTBN30 AND HADTBN36 FILLERS INSTALLATION INSTRUCTION

Choose the filler that fits to cover the back bottom edge of the cabinet. If present, remove all protective film on filler. Use 4 no. 6 x 1/2" truss head wood screws (included) to mount it.

CAUTION

Never use an electric screwdriver or drill to screw the filler to the bottom edge of cabinet; use a standard screwdriver.

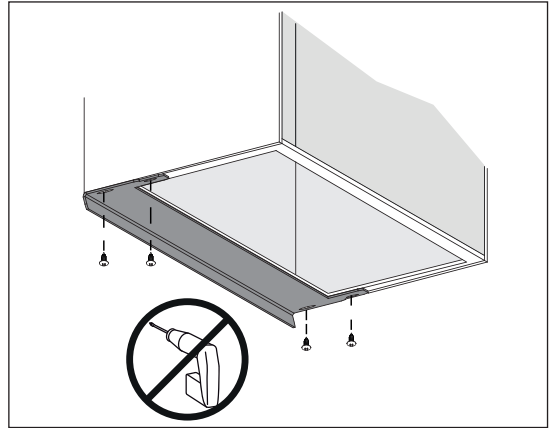


DIRECTIVES D'INSTALLATION DES BANDES PROTECTRICES HADTBN24, HADTBN30 ET HADTBN36

Choisir la bande protectrice qui peut couvrir la lisière arrière de l'armoire. Le cas échéant, retirer toute présence de pellicule de plastique sur la bande protectrice. Utiliser 4 vis à bois à tête bombée n°6 x 1/2 po (incluses) pour la fixer.

ATTENTION

Ne jamais utiliser un tournevis électrique ou une perceuse pour visser la bande protectrice à la lisière arrière de l'armoire, se servir d'un tournevis standard.

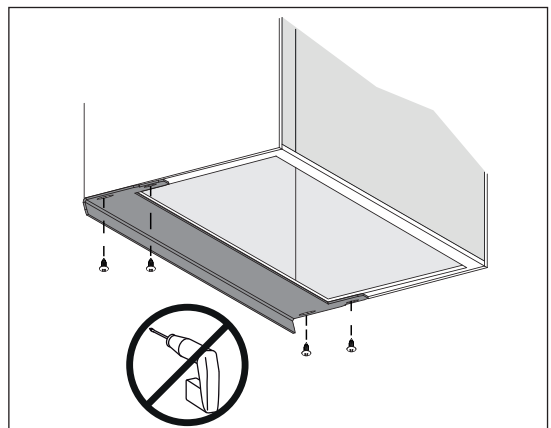

INSTRUCCIONES PARA LA INSTALACIÓN DE LAS CINTAS PROTECTORAS HADTBN24, HADTBN30 Y HADTBN36

Elegir la cinta protectora que puede cubrir el borde trasero del gabinete. De haberla, retire de la cinta protectora la película de plástico. Usar 4 tornillos para madera de cabeza redondeada n.º 6 x 1/2 pulg. (incluidos) para sujetarla.

ATENCIÓN

Nunca utilice un atornillador eléctrico o un taladro para atornillar la cinta protectora al borde trasero del gabinete, usar un destornillador estándar.

